

How to enter your destination

As usual with destination control systems, you need to enter your destination on the keypad of the terminal. If there is unrestricted access to the floor you select, an elevator is immediately assigned: e.g. **<A>** or ****.

If the floor you enter does not exist, the display shows **??** or *****. If access to the destination floor is restricted, the **(⌂)** sign in the display requests you to identify yourself.

Depending on the security level, you can identify yourself as follows:

- Present your identification medium to the reader
- Enter your PIN code
- Present your identification medium and enter your PIN code. In this case, after you have presented your identification medium, the display prompts you to enter your PIN code with **PIN**.

The security levels for the individual floors are set by the security manager of the building. If the identification check shows that you are authorized to go to the floor you selected, the display indicates which elevator is assigned, otherwise **XX** is displayed.

(⌂) Identification medium

To identify yourself as the user, please hold your identification medium in front of the reader. Hold it at a distance of about 1 – 2 cm. The position of the reader is marked with the following symbol: **(⌂)**.

Automatic destination

Instead of having to enter your destination every time and then presenting your identification medium, you can program your medium so that your destination is automatically assigned after you identify yourself. You can change your automatically programmed destination on any floor where a Schindler terminal for personalized access and identification is installed:

Step 1
Press the minus button **2 x** **-**

Step 2
Present your identification medium **(⌂)**

Step 3
Enter your automatic destination **1 4**
(Example: 1 or 2 digits)

Step 4
Press the minus button or wait for confirmation with **OK** **-**

If you now present your identification medium, the display confirms the destination you have programmed. If you do not wish to travel to the automatic destination, but to a different one, you must first enter your destination and then present your identification medium as described under «How to enter your destination».

There are two other types of individual programming:

1. Your automatic destination is the last destination

2 x **-** **(⌂)** **9 9** **-**
Identification

2. You have no automatic destination:

2 x **-** **(⌂)** **9 8** **-**
Identification

After you present your identification medium, the symbol **??** prompts you to enter your destination.

PIN code option

You can enter your PIN code on any Schindler terminal for personal access and identification. This procedure has been authorized by the building security manager. This gives you access even if you are not carrying your personal identification medium with you. It is advisable to enter your PIN code on any terminal as soon as possible after you receive your identification medium. Your PIN code is only a **substitute** and has **limited validity**. For details please contact your building security manager.

How to program your PIN code:

Step 1
Press the minus button twice **2 x** **-**

Step 2
Present your identification medium **(⌂)**

Step 3
Now enter your code with 5 to 9 digits
The code must not start with zero (0), and combinations which are too simple, such as 12345, are not accepted.

Step 4
Press the minus button or wait for confirmation with **OK** **-**
If your code is not accepted by the system (characters: **XX**) please try entering a different code.

How to use your PIN code:

Enter your code with 5 to 9 digits **-**
If your code starts with a number which could be a destination floor, this number is initially displayed. As soon as the system recognizes that you are entering a PIN code, the remaining digits you enter are suppressed, and the display alternates between ***** and ******.

Stairway option

You can also use your personal identification medium or PIN code to open stairway or other doors. For this purpose, on each door close to the door handle there is a card reader marked with the familiar symbol **(⌂)**.

Visitor control option

The visitor control allows visitors to establish telephone contact with people in the building. If desired, the person called can send an elevator to fetch the visitor. To do so, the person called must press the number sign **#** on their telephone during the conversation.

The elevator takes the visitor to the floor of the office or apartment stored in the system for the person being called. To send the visitor to a different floor, this floor number **?** must be pressed as well as the number sign **#**. To be able to do this, the person called must have access to the other floor.

If the visitor control is equipped with a reader **(⌂)**, you can also enter your personal configuration there.



Schindler 7000 Traffic Management System Operating Instructions.

Schindler Elevator Ltd.
Top Range Division

Zugerstrasse 13
6030 Ebikon, Switzerland
Phone + 41 41 445 31 31
Fax + 41 41 445 36 69

trd@ch.schindler.com
www.schindler.com

It is about saving time

The new generation of elevator Traffic Management System represents a quantum leap forward in elevator technology.

It is a revolutionary elevator Traffic Management System that brings people to their destinations sooner than any conventional elevator control by grouping together people traveling to the same destination floor. This reduces the number of intermediate stops and thereby improves the elevator system's efficiency.


At the heart of the Schindler Traffic Management System is an advanced computer that keeps track of the location of the elevator cars, the number of people using the elevators at any time, the number of people who have called an elevator car by registering their destination floors. The system schedules all elevator movements to bring people to their destinations as quickly as possible.

The Schindler Traffic Management System is a little different from standard elevators but it is just as easy to use. The key to the system is the keypad, similar to that found on a touch-tone phone.

Using it is as easy as ... **1, 2, 3**

1 Press the push buttons for your desired floor

The keypads are conveniently located in the elevator lobbies of each floor. Each keypad features push buttons which you use to register your destination floor number. To call an elevator car, press the push buttons for your desired floor.

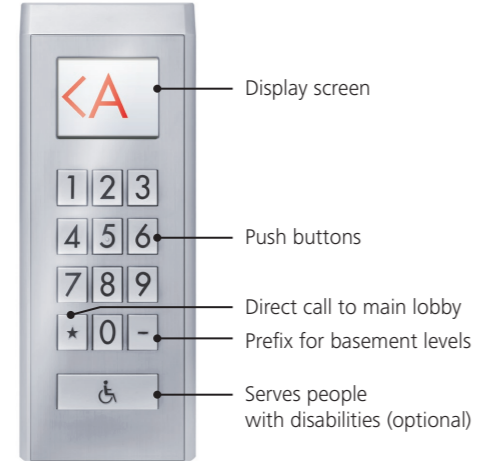


You need to press only one or two buttons.

For example:

- Press **3** for floor **3**
- Press **2**, then **5**, for floor **25**
- Press **0** or **★** for main lobby
- Press **-**, then **2**, for basement floor **2**

 
For people with disabilities:

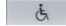- Press , then floor number
- Optional features activated on request

2 Read the elevator car assignment

A unique feature of the Schindler Traffic Management System is the display screen on the keypad console. As soon as you press the buttons to register your destination floor, the display screen will indicate a letter and a symbol. The letter identifies which elevator has been designated by the Schindler computer to take you to your destination, and the symbol tells you the elevator's location.


The keypad display screen will tell you which elevator car to board and its location.

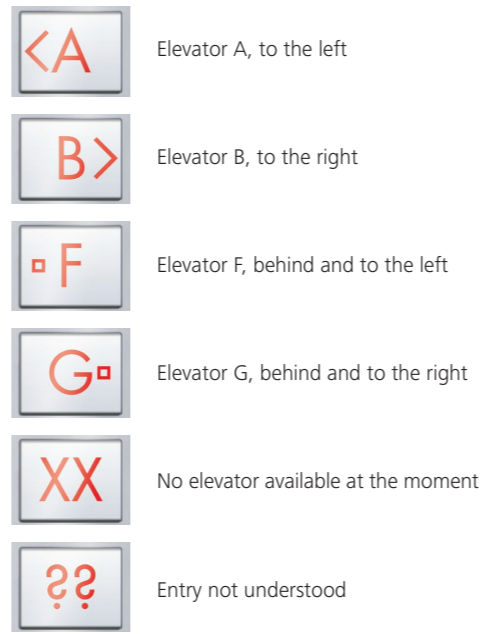

3 Walk to your elevator and enjoy the ride

As soon as the display screen tells you which elevator you have been assigned, walk to that elevator and wait for the doors to open. Enter the car which will take you to your destination.

There are two ways to confirm that you are at the correct elevator: the letter above each entrance and the floor stop indicator in the car entrance frame. The floor stop indicator flashes to confirm the car will stop at the floor you have chosen and remains illuminated while you travel. It flashes again to signal the approaching stop.

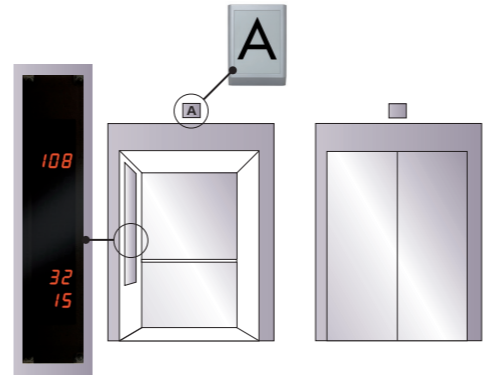

Convenience for people with disabilities (Optional feature)

The Schindler Traffic Management System has features for people with special needs. To activate these features, first press the international symbol for accessibility located on the keypad. Then press the buttons for your desired floor.

- The system will attempt to assign an elevator with fewer passengers to provide more room in the car.
- It will be also provided additional time for a person with disabilities to reach the elevator car.
- Visual signals from the keypad will indicate that a car has been assigned to handle the call.

Personalized access and identification

Schindler 7000 Traffic Management System provides also personalized access and identification: With these features installed, personal identification is required to travel to some or all floors. The identification medium can be a card, key ring, wristwatch, or some other medium. For you to enter your travel destination, terminals have been placed at the main stop, as well as on some or all other floors.

